INSTALLATION INSTRUCTIONS FOR 9801

For Wall Sconce Fixture

WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER .

MOUNTING THE FIXTURE (Fig.1)

1. Shut off power at the fuse box or circuit breaker box. If necessary, remove the old fixture and all mounting hardware from wall junction box.
2. Carefully unpack your new fixture and lay out all the parts on a clear area. Take care not to lose any small parts necessary for installation.
3. Attach the crossbar to the junction box with the two junction box screws as shown. The side of the crossbar marked “GND” must face out.
4. Thread the nipple part way into the center hole of the crossbar. The length of the nipple into the crossbar may be adjusted if necessary.

CONNECTING THE WIRES (Fig.2)

5. Connect the electrical wires as shown in Fig. 2. Make sure all wire connectors are secured. If your outlet has a ground wire (green or bare copper), connect the fixture’s ground wire to the crossbar with the green screw provided.

COMPLETING THE INSTALLATION (Fig.1)

6. Align the fixture back plate to the nipple and secure with the cap nut provided
7. Notice: To comply with UL Standards and maintain product warranty, use clear silicone sealant to outline the outside of the fixture back plate where it meets the wall to prevent moisture from entering the junction box while leaving a space at the bottom to allow moisture to escape (Fig 3.). Failure to do so will void any expressed warranty.
8. Install the light bulbs in accordance with the fixture’s specification: **DO NOT EXCEED THE MAXIMUM WATTAGE RATING!**
9. Place the glass with the marked arrow on the topside into the fixture and secure the steel glass support bar with the screws and plastic washer provided.
10.

Your installation is now complete. Return power to the junction box and test the fixture.

Fig.1

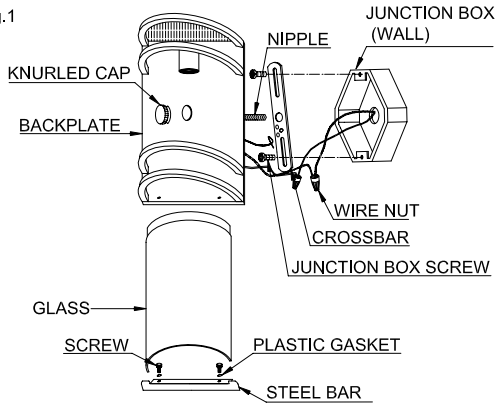

Fig .2

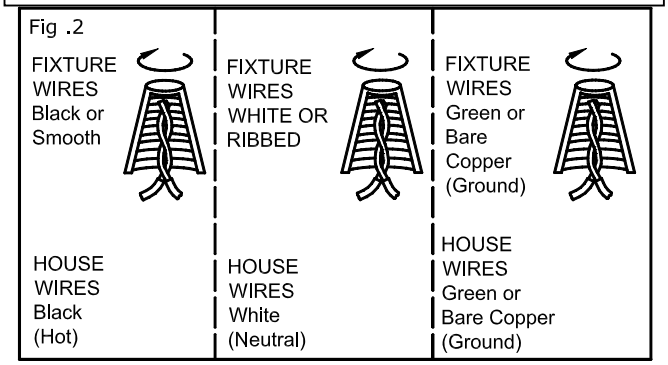
FIXTURE WIRES Black or Smooth
FIXTURE WIRES WHITE OR RIBBED
FIXTURE WIRES Green or Bare Copper (Ground)
HOUSE WIRES Black (Hot)
HOUSE WIRES White (Neutral)
HOUSE WIRES Green or Bare Copper (Ground)

Fig.3